 




5.5L Deluxe Digital Air Fryer

INSTRUCTION MANUAL

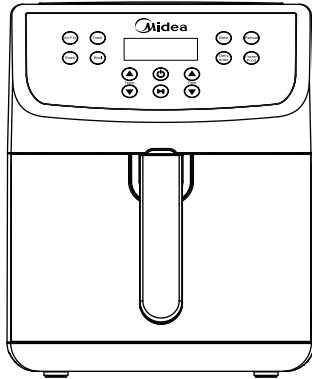


MODEL NO.:MF-CN55A2

PLEASE READ THE INSTRUCTIONS MANUAL CAREFULLY BEFORE USE

IMPORTANT SAFEGUARDS

 
 
 
1. This appliance is for household use only. Do not use outdoors.
2. This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
3. Children should be supervised to ensure that they do not play with the appliance
4. This appliance is intended to be used in household and similar environments such as:
 - Staff kitchen areas in shops, office and other working environments;
 - farm houses;
 - by clients in hotels, motels and other residential type environments;
 - bed and breakfast type environments;
5. If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
6. Please turn off and unplug the appliance before cleaning, maintenance or relocation and whenever it is not in use.
7. The surfaces are liable to get hot during use.
8. After being used for a long time, the corresponding heating zone of the induction hot plate is still hot. Never touch the ceramic surface to avoid burning.
9. Do not immerse any part of the appliance in water or other liquid.
10. Never immerse the housing, which contains electrical components and the heating elements, in water nor rinse

IMPORTANT SAFEGUARDS

11. Do not let any water or other liquid enter the appliance to prevent electric shock.
12. Always put the ingredients to be fried in the basket, to prevent it from coming into contact with the heating elements.
13. Do not cover the air inlet and the air outlet openings while the appliance is operating.
14. Do not fill the pan with oil as this may cause a fire hazard.
15. Never touch the inside of the appliance while it is operating.
16. Keep the mains cord away from hot surfaces.
17. Never connect this appliance to an external timer switch or separate remote-control system in order to avoid a hazardous situation.
18. During hot air frying, hot steam is released through the air outlet openings. Keep your hands and face at a safe distance from the steam and from the air outlet openings. Also be careful of hot steam and air when you remove the pan from the appliance.
19. Immediately unplug the appliance if you see dark smoke coming out of the appliance. Wait for the smoke emission to stop before you remove the pan from the appliance.
20.  Please pay attention to areas with high temperature symbol as scalding is possible.

General description of main parts


Product components

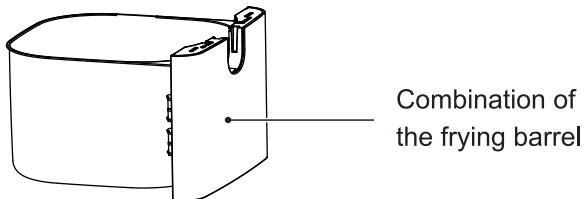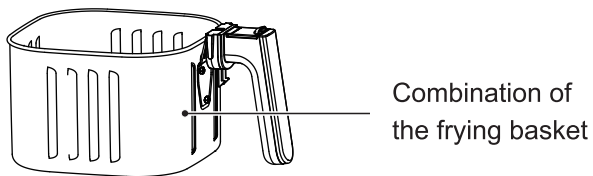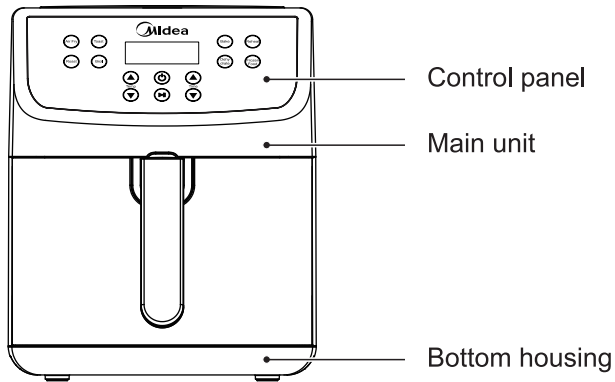

Technical specification

Model	Voltage frequency	Rated power	Rated Capacity
MF-CN55A2	220-240V~ 50/60Hz	1550-1850W	5.5L

 Instructions for use

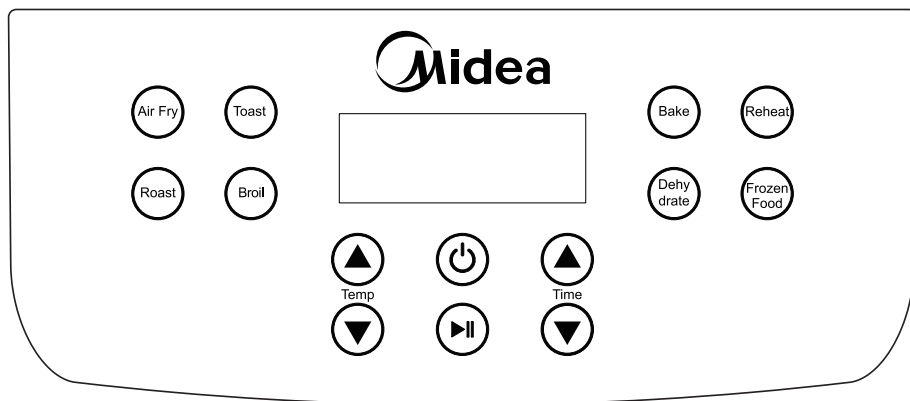

Operation process of the panel: To power the machine on -> touch the power switch (The machine will enter function selection state)

Select the default menu or DIY setting for temperature/time (The machine will enter the default menu or DIY settings state for temperature/time)

Press the start/stop button(Machine will be begin cooking)

Press the start/stop button a second time (Machine will stop cooking)

Note: Under the state of function selection, the selected state of default function, the working state and the state of work suspension, the machine may adjust temperature and time through the DIY setting function of temperature/time. For the temperature adjustment, briefly press 5 °C for run-out and long press it to rapidly adjust the temperature; For the time adjustment, briefly press 1 min for run-out and long press it to rapidly adjust time.

The default menu pre-sets the heating temperature and time:

Menu function	Temperature (°C (°F))		Time (MIN)	
	Pre-setting	Adjustment range	Pre-setting	Adjustment range
Airfry	200 (400)	80-200 (170-400)	15	1-60
Roast	200 (380)	80-200 (170-400)	40	1-60
Toast	200 (400)	80-200 (170-400)	25	1-60
Broil	200 (400)	80-200 (170-400)	10	1-60
Dehydrate	52 (120)	30-90 (90-200)	10:00	1:00-24:00
Reheat	115 (240)	80-200 (170-400)	12	1-60
Bake	180 (360)	80-200 (170-400)	15	1-60
Frozen Food	200 (400)	80-200 (170-400)	15	1-60

Preparation for use

1. The product should be placed on a steady flat surface, where the power cord can reach the power outlet; it should be placed in a well ventilated area away from any flammable substances.

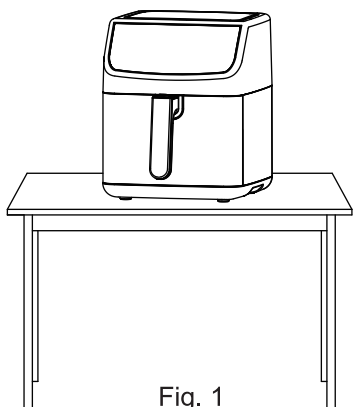 


Fig. 1

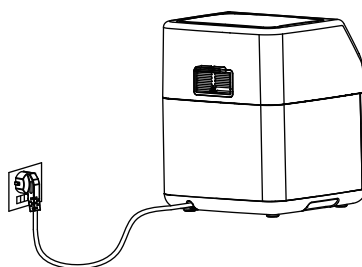 


Fig. 2

2. Put the frying basket into the frying barrel and fasten it in place (Fig. 3), and then push it into the main machine (Fig. 4).

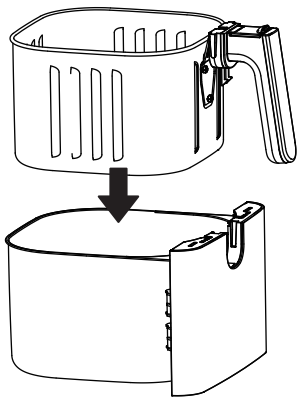 


Fig. 3


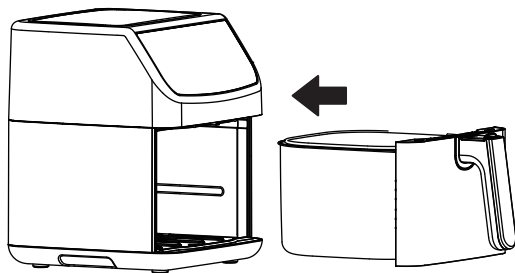 



Fig. 4

 3. Before placing meal ingredients, preheat the machine for 3-6 minutes to improve the cooking effect.

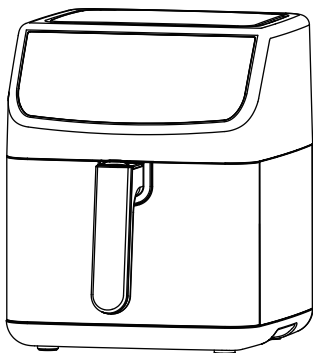


Usage

 
1. Press the top of the machine with one hand and pull the frying barrel out with the other hand. The frying barrel needs to be placed on a stable surface.

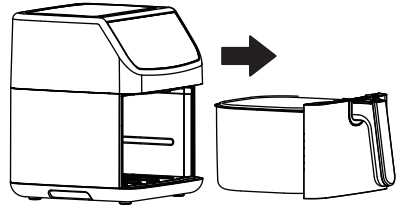

 -
2. Put the meal ingredients inside the frying basket of the frying barrel.

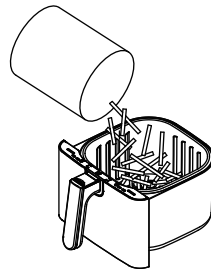


 -
3. After the machine is powered on the machine will chime, push the frying barrel into the machine. The machine will enter the function state and the display will show the set time and temperature.

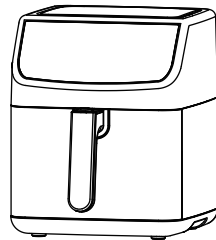


4. Select the required function through the control panel - the machine will show the set temperature and time or set the required time and temperature through the DIY function. Press the start key and the machine will enter the cooking state.

 Note: If the frying barrel is not pushed in totally, the micro switch will not be triggered and the machine will remain in a powered-off state. You will be required to push the frying barrel in totally for the machine to function. The machine has a two-hour power off memory meaning that after removing the barrel during cooking to stir, you can push the barrel back into the machine and cooking will continue the cooking process prior to removal of the barrel.

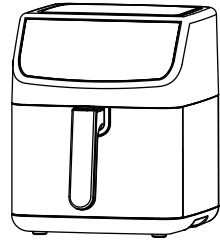

 
5. After reaching half of the time set, the machine will chime five times and the "shake" light will show. Pull out the barrel and flip the food to a different cooking side.

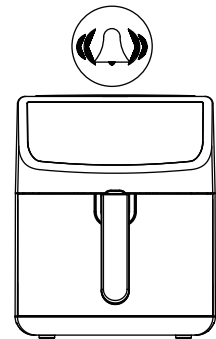


6. The machine will chime after cooking is completed. Unplug the machine from power and pull out the barrel and place on a flat steady surface. To avoid, scalding or toppling of the frying barrel, use utensils to carefully take out the food on a flat steady surface. Please carefully take it out. Do not put it on the desk flatwise, so as to avoid being scalded by steam or toppling over the frying barrel, which may lead to scalding by oil or high temperature food. In addition, the auxiliary tools (such as chopsticks) are suggested to be used in the process of taking out food.

Cleaning and maintenance

 1. Please only clean when the air fryer has cooled down so as to avoid scalding.
2. After use, clean the frying basket and barrel timeously so as to avoid damage to the coating by erosive food residue and oil.
3. Please do not clean machine with highly corrosive cleaning agents as it may be damaging to the machine or your health.
4. Please wipe the air fryer with the soft and clean cloth. Please do not clean the air fryer with too wet cloth, so as to prevent water from entering inside the air fryer, which may easily lead to short circuit and fire.
5. Please do not clean the air fryer with other cleaning equipment like the dishwasher. Otherwise, it may lead to damage and influence the use.
6. Please clean the frying basket and the frying barrel with the neutral cleaning agent or clean water.

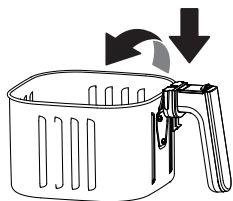

 Uncover the "protection cover" and press the "key".

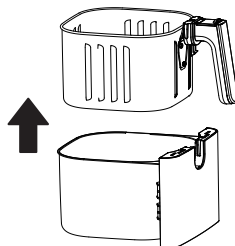

Just raise the "frying basket".

7. Do not clean the frying basket and the frying barrel with hard and sharp objects (such as the steel wool and blade), and avoid scratching the frying basket and the frying barrel.

Troubleshooting Guide

SN	Fault Symptom	Cause	Troubleshooting Method
1	Not power on	Check whether the plug is plugged in place	Insert again or to another socket
2		The frying barrel is not assembled properly	Pull the frying barrel out and into the machine again to assemble properly
3		Thermostat (the protection device) is disconnected	Deliver the appliance to the authorized Maintenance Department
4		The display lamp burns out	After the power is on, if the motor works and heats up regularly, you can send the product to a designated maintenance service point
5	The motor doesn't work or has abnormal sound	There is foreign matter blocking the fan blade or steam inlet is blocked	After the power is off, check if there is foreign matter at the air inlet and inside the chamber; if there is still a fault, send the product to a designated maintenance service point
6	E01 alarm	NTC abnormal open circuit	Deliver the appliance to the authorized Maintenance Department
7	E02 alarm	NTC abnormal short circuit	Deliver the appliance to the authorized Maintenance Department