



Water Dispenser

USER MANUAL

**YL2037S-B
YL1632S-W**

Warning notices: Before using this product, please read this manual carefully and keep it for future reference. The design and specifications are subject to change without prior notice for product improvement. Consult with your dealer or manufacturer for details. The diagram above is just for reference. Please take the appearance of the actual product as the standard.

THANK YOU LETTER

Thank you for choosing Midea! Before using your new Midea product, please read this manual thoroughly to ensure that you know how to operate the features and functions that your new appliance offers in a safe way.

CONTENTS

THANK YOU LETTER	01
SAFETY INSTRUCTIONS	02
SPECIFICATIONS	05
PRODUCT OVERVIEW	06
PRODUCT INSTALLATION	09
OPERATION INSTRUCTIONS	11
CLEANING AND MAINTENANCE	13
TROUBLESHOOTING	14
TRADEMARKS, COPYRIGHTS AND LEGAL STATEMENT	15
DISPOSAL AND RECYCLING	16
DATA PROTECTION NOTICE	17

SAFETY INSTRUCTIONS

Intended Use

The following safety guidelines are intended to prevent unforeseen risks or damage from unsafe or incorrect operation of the appliance. Please check the packaging and appliance on arrival to make sure everything is intact to ensure safe operation. If you find any damage, please contact the retailer or dealer. Please note modifications or alterations to the appliance are not allowed for your safety concern. Unintended use may cause hazards and loss of warranty claims.

Explanation of Symbols



Danger

This symbol indicates that there are dangers to the life and health of persons due to extremely flammable gas.



Warning of electrical voltage

This symbol indicates that there is a danger to life and health of persons due to voltage.



Warning

The signal word indicates a hazard with a medium level of risk which, if not avoided, may result in death or serious injury.



Caution

The signal word indicates a hazard with a low degree of risk which, if not avoided, may result in minor or moderate injury.



Attention

The signal word indicates important information (e.g. damage to property), but not danger.



Observe instructions

This symbol indicates that a service technician should only operate and maintain this appliance in accordance with the operating instructions.

Read these operating instructions carefully and attentively before using/commissioning the unit and keep them in the immediate vicinity of the installation site or unit for later use!

SAFETY INSTRUCTIONS

DANGER: Risk of Fire/Flammable materials

- Do not store explosive substances such as aerosol cans with a flammable propellant in this appliance.
- The appliance must be disconnected from the main safter use and before user-performable maintenance is carried out.
- The following safety guidelines are intended to prevent unforeseen risks or damage from unsafe or incorrect operation of the appliance. Please check the packaging and appliance on arrival to make sure everything is intact to ensure safe operation. If you find any damage, please contact the retailer or dealer. Please note modifications or alterations to the appliance are not allowed for your safety concern. Unintended use may cause hazards and loss of warranty claims.

CAUTION: Risk of injury!

Failure to comply with the safety information and instructions may result in injury. Safety of children and persons with reduced abilities.

- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the appliance.
- This appliance is intended to be used in household and similar applications such as: staff kitchen areas in shops, offices and other working environments; farm houses and by clients in hotels, motels and other residential type environments; bed and breakfast type environments; catering and similar non-retail applications.

WARNING

- If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
- This appliance is intended to be used by expert or trained users in shops, in light industry and on farms, or for commercial use by lay persons.
- The appliance is suitable for indoor use only.
- **WARNING:** Keep ventilation openings, in the appliance enclosure or in the built-in structure, clear of obstruction.

SAFETY INSTRUCTIONS

- WARNING: When positioning the appliance, ensure the supply cord is not trapped or damaged.
- WARNING: Do not locate multiple portable socket-outlets or portable power supplies at the rear of the appliance.
- WARNING: To avoid a hazard due to instability of the appliance, it must be fixed in accordance with the instructions.
- Never turn the machine upside-down or lean it more than 45°.
- The appliance must not be cleaned by a water jet.
- The appliance must not be immersed.
- This product is not recommended to use in areas above 1,500m altitude.
- It is recommended to use bottled pure water. If you use hard water, may lead to hot pot furring or detonation tank or pipeline risk. If you need cleaning tube, remove scale, need to find a professional institutions and professional operation.
- In order to make sure the machine can be used normally, please keep it stand still for 24 hours before powering up.

SPECIFICATIONS




Product Model	YL2037S-B
Rated Voltage	220-240V-
Rated Frequency	50/60Hz
Rated power	520W
Heating power	420W
Cooling current	1.0A
Hot water	4L/h($\geq 85^{\circ}\text{C}$)
Cold water	2L/h($\leq 10^{\circ}\text{C}$)
REFRIGERANT	R134a(36g)

Product Model	YL1632S-W
Rated Voltage	220-240V-
Rated Frequency	50/60Hz
Rated power	520W
Heating power	420W
Cooling current	1.0A
Hot water	4L/h($\geq 85^{\circ}\text{C}$)
Cold water	2L/h($\leq 10^{\circ}\text{C}$)
REFRIGERANT	R134a(25g)

PRODUCT OVERVIEW

Product

  
 
YL2037S-B

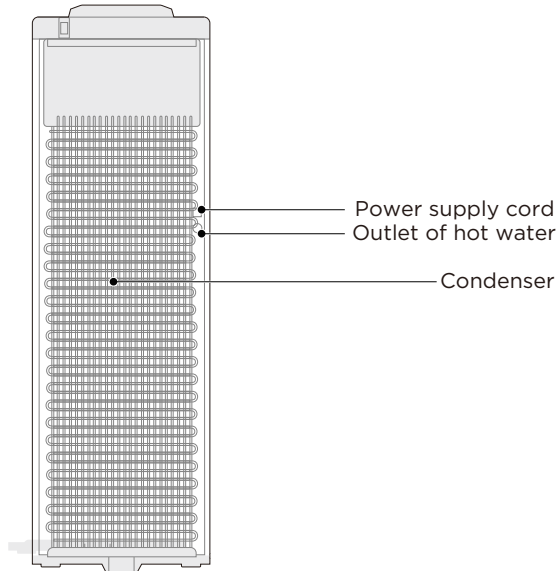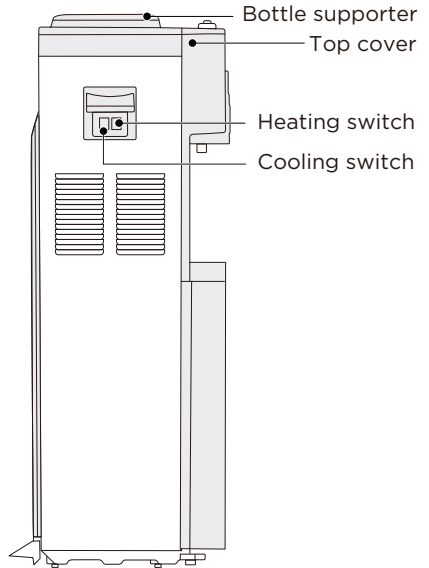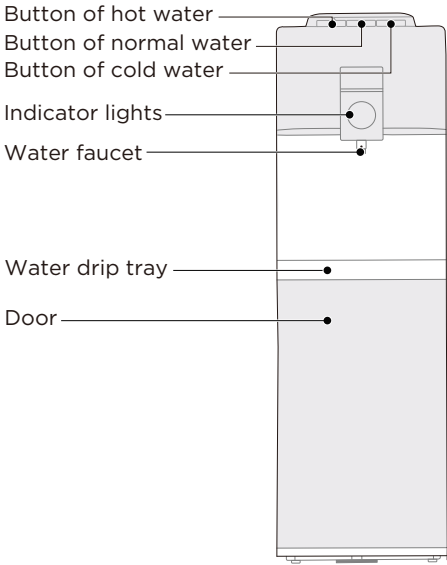

PRODUCT OVERVIEW

Product

  
YL1632S-W

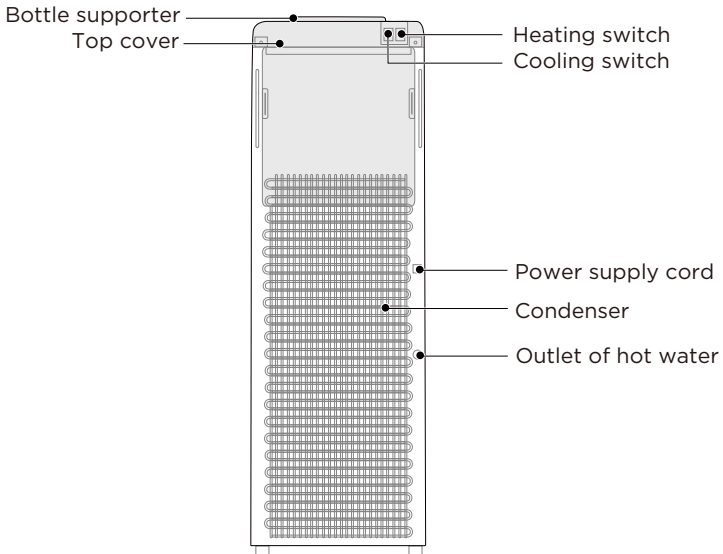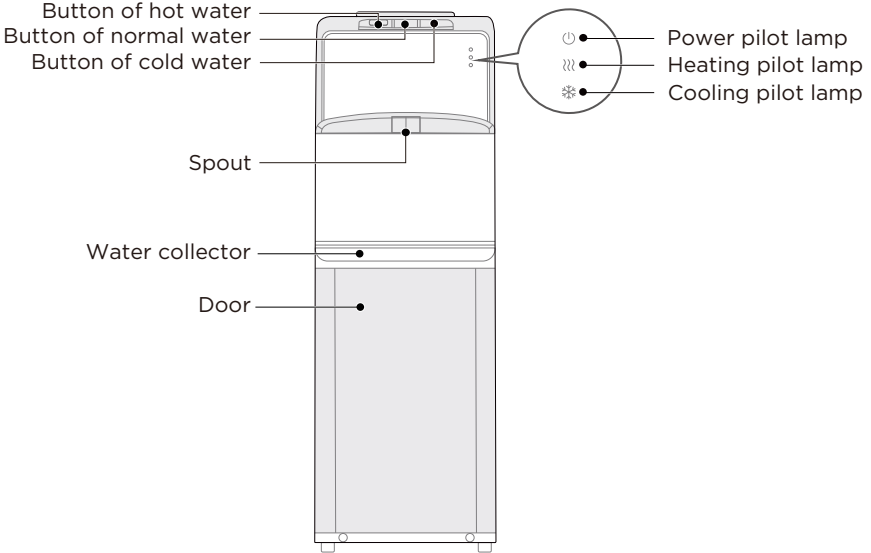

Accessories

YL2037S-B

 
Instruction Manual x1

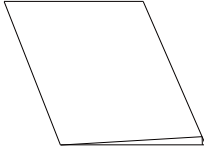


Warranty Card x1



 
screw x2



fixed block x1

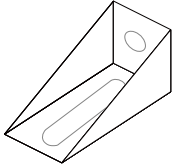 


Anchor bolt x1

 

YL1632S-W

 
Instruction Manual x1

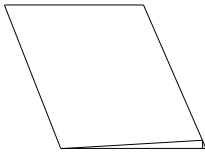


Warranty Card x1



 screw x1



Anchor bolt x1

 

PRODUCT INSTALLATION

GETTING STARTED

 
Locate Dispenser

1. Use the appliance indoors, where is no likelihood of rain or bad weather, as there is damage risk to the product electrical system.
2. Place dispenser upright the product must be installed in as easily accessible location in case of repairs.
3. Place dispenser upright on a flat surface and keep a minimum distance of 20cm from the wall. Make sure that the ventilation openings of the product are not being obstructed.

Notice: Must make sure the outlet is connected to ground wire well before installing, Do NOT plug in power cord yet.

Install Water Bottle


1. Tear the label from the bottle.
2. Vertically insert the bottle into the bottle supporter on top of the machine. Do not plug the power cord or push the heating switch until water runs out from the tap of hot water.
3. Insert the plug to socket, then turn on the power switch. Indicators light up accordingly once the machine works.
4. Vertically pull out the bottle by two hands when the bottle is empty, then replace it with another bottle of water.
5. This appliance should work under environment of temprature from 10°C-43 °C humidity ≤ 90%.
6. This appliance is not suitable for installation in an area where a water jet could be used.

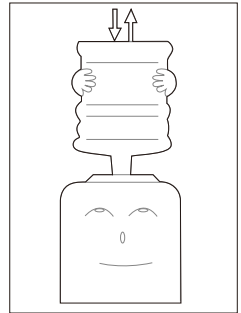

Notice: This unit has been tested and sanitized prior to packing and shipping. During transit dust and odors can accumulate in the tank and lines. Dispense and dispose at least one quart of water prior to drinking any water.

Provide Electricity

 First make sure that the two switches on the left of the water dispenser are turned Off. If it is On it will damage the water dispenser. Plug power cord into a properly grounded wall outlet, the power pilot lamp will be On at the same time. It will take up to 3-4 minutes to fill both tanks for the 1st time.

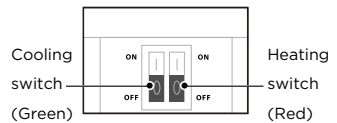

PRODUCT INSTALLATION

Activate Heating & Cooling

Notice: This unit will not dispense hot or cold water until the switches are activated, and make sure water comes out of taps before activating heating or cooling switch;

 
To activate, push power switches on the left side in to start heating and cooling water and the heating pilot lamp or cooling pilot lamp is on at the same time.

- If you do not want to heat water, push bottom side of red switch to the OFF position.


- If you do not want to cool water, push bottom side of green switch to the OFF position.

MACHINE INSTALLATION

1. Use the screw to fix the bracket on the hole of the middle bottom of the water dispenser.
2. Make a hole on the floor's surface where the water dispenser will be installed.
3. Fix the bracket on the floor by screw tightly.
4. Tighten the screw.

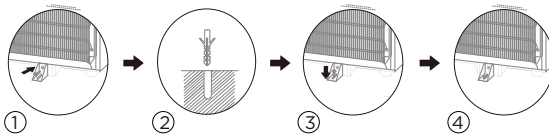


YL2037S-B

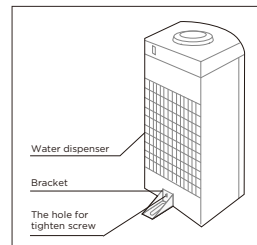 


WARNING! To avoid a hazard due to instability of the appliance, it must be fixed in accordance with the instructions.

Instructions for installation:

 1. The right as the picture shown.
2. Make a hole on the floor's or the desk's surface where the water dispenser will be installed.
3. Use the screw to fix the bracket on the left bottom angle of the water dispenser.
4. Fix the machine on the ground or the table.

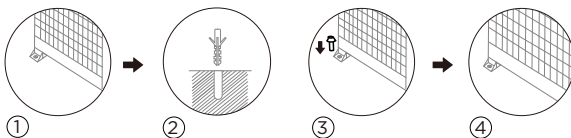

YL1632S-W

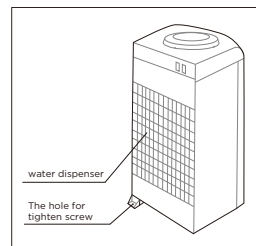 


WARNING! To avoid a hazard due to instability of the appliance, it must be fixed in accordance with the instructions.


OPERATION INSTRUCTIONS




 
Operation Panel

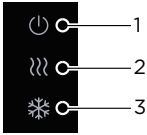YL1632S-W

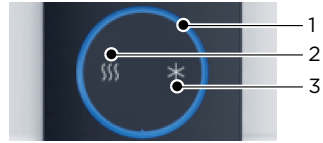 

YL2037S-B

  

		Description
No.1	 Power Indicator Light	<ul style="list-style-type: none"> Plug cord into a properly grounded wall outlet, the power pilot lamp is on, and off when unplug;
	 Round Indicator Light	<ul style="list-style-type: none"> Plug the power supply cord into a wall outlet, the power pilot lamp will light up and will go off when the unit is unplugged. If the machine is powered on, you don't need the round indicator light, you can turn off the round indicator light switch on the back of the machine.
No.2	 Heating Indicator Light	<ul style="list-style-type: none"> Plug cord into a properly grounded wall outlet, turn on the heating switch, the heating pilot lamp is on when heating is in progress, and off when heating has been completed; the heating pilot lamp is off and stop heating when turn off the heating switch;
No.3	 Cooling Indicator Light	<ul style="list-style-type: none"> Plug cord into a properly grounded wall outlet, turn on the cooling switch, the cooling pilot lamp is on when cooling is in progress, and off when cooling has been completed; the cooling pilot lamp is off and stop cooling when turn off the cooling switch;

Dispensing Water

Dispensing Cold Water

Cooling water is ready after 3 hours for the 1st install. The compressor will work again and you have to wait until the cooling light is off. During this time the compressor could run continuously. This is normal.

1. Position bottle, glass, pitcher or cooking pot below tap.
2. Depress cold water button downward to start cold water flow.
3. Release button once desired fill level is achieved.

OPERATION INSTRUCTIONS

Dispensing Ambient Water

1. Position bottle, glass, pitcher or cooking pot below tap.
2. Depress ambient water button downward to start ambient water flow.
3. Release button once desired fill level is achieved.

Dispensing Hot Water

Hot water is ready after 15 minutes for the 1st install. The water will be heated again. You have to wait until the heating light is off.

1. Position bottle, glass, pitcher or cooking pot below tap.
2. Slide red switch left to the bottom and push hot water button downward to start hot water flow.
3. Release button once desired fill level is achieved.

CLEANING AND MAINTENANCE

To avoid accident, cut off the power supply before operation according to the following instructions.

1. The machine had been disinfected before departing from factory. Clean the dispenser prior to installing a full bottle of water for the first time.

2. Cleaning and draining instruction:

- 1) Before cleaning, make sure the power switch in the O(off) position and unplug the water dispenser.
- 2) Vertically insert the bottle into the supporter on top of the machine.
- 3) Open the taps, let about 3 liter water flow into a container.
- 4) Remove the water bottle from the dispenser.
- 5) Place a large bucket beneath the drain outlet. Remove the drain cover and allow water to drain.
- 6) After draining, replace the drain cover and you can use the machine.

Attention: The dispenser heats water to a temperature of approximately 85 °C. It can cause severe burns. Please operate it carefully.

3. Sanitizing

The machine should be disinfected with a disinfectant according to the instruction manual of the disinfectant and then clean it with water(see cleaning and draining instruction) Generally this should be done every three months.

4. To Remove Mineral Deposits:

Mix 4 liters water with 200g citric acid crystals, inject into the machine and make sure the water can flow out of the hot water tap. Switch on the power and heat it about 10 minute. 30 minutes later, drain off the liquid and clean it with water two or three times. Generally this should be done every six months.


Never disassemble this machine by yourself to avoid danger from damaging machine.

TROUBLESHOOTING

Please check the followings before having the machine repaired.

Problem	Possible reason	Solution
No hot or cold water	• Over consumption of hot or cold water in short time.	Just wait a moment, then hot or cold water is available again.
	• No power supply.	Connect plug to socket, turn on heating or cooling switch.
No water running out from taps	• Empty bottle.	Replace it with another one.
	• Inlet of bottle supporter. blocked by bottle seal.	Clean out wasted paper&bot- tle seal, install bottle again.
Leakage from bottle supporter	• Broken bottle.	Replace it with a new bottle.
Noisy operation	• Not placid installation.	Place the machine on placid & solid surface.

TRADEMARKS, COPYRIGHTS AND LEGAL STATEMENT

 Midea logo, word marks, trade name, trade dress and all versions thereof are valuable assets of Midea Group and/or its affiliates (“Midea”), to which Midea owns trademarks, copyrights and other intellectual property rights, and all goodwill derived from using any part of an Midea trademark. Use of Midea trademark for commercial purposes without the prior written consent of Midea may constitute trademark infringement or unfair competition in violation of relevant laws.

This manual is created by Midea and Midea reserves all copyrights thereof. No entity or individual may use, duplicate, modify, distribute in whole or in part this manual, or bundle or sell with other products without the prior written consent of Midea.

All the described functions and instructions were up to date at the time of printing this manual. However, the actual product may vary due to improved functions and designs.

DISPOSAL AND RECYCLING

Important instructions for environment

Compliance with the WEEE Directive and Disposing of the Waster Product:
This product complies with EU WEEE Directive (2012/19/EU). This product bears a classification symbol for waster electrical and electronic equipment (WEEE).

This symbol indicates that this product shall not be disposed with other household wastes at the end of its service life. Used device must be returned to official collection point for recycling of electrical electronic devices. To find these collection systems please contact to your local authorities or retailer where the product was purchased. Each household performs important role in recovering and recycling of old appliance. Appropriate disposal of used appliance helps prevent potential negative consequences for the environment and human health.



Compliance with RoHS Directive

The product you have purchased complies with EU RoHS Directive (2011/65/EU). It does not contain harmful and prohibited materials specified in the Directive.

Package information

Packaging materials of the product are manufactured from recyclable materials in accordance with our National Environment Regulations. Do not dispose of the packaging materials together with the domestic or other wastes. Take them to the packaging material collection points designated by the local authorities.



DATA PROTECTION NOTICE

For the provision of the services agreed with the customer, we agree to comply without restriction with all stipulations of applicable data protection law, in line with agreed countries within which services to the customer will be delivered, as well as, where applicable, the EU General Data Protection Regulation (GDPR).

Generally, our data processing is to fulfil our obligation under contract with you and for product safety reasons, to safeguard your rights in connection with warranty and product registration questions. In some cases, but only if appropriate data protection is ensured, personal data might be transferred to recipients located outside of the European Economic Area.

Further information are provided on request. You can contact our Data Protection Officer via **MideaDPO@midea.com**. To exercise your rights such as right to object your personal data being processed for direct marketing purposes, please contact us via **MideaDPO@midea.com**. To find further information, please follow the QR Code.



make yourself at home



www.midea.com

© Midea 2023 all rights reserved